




FV 030

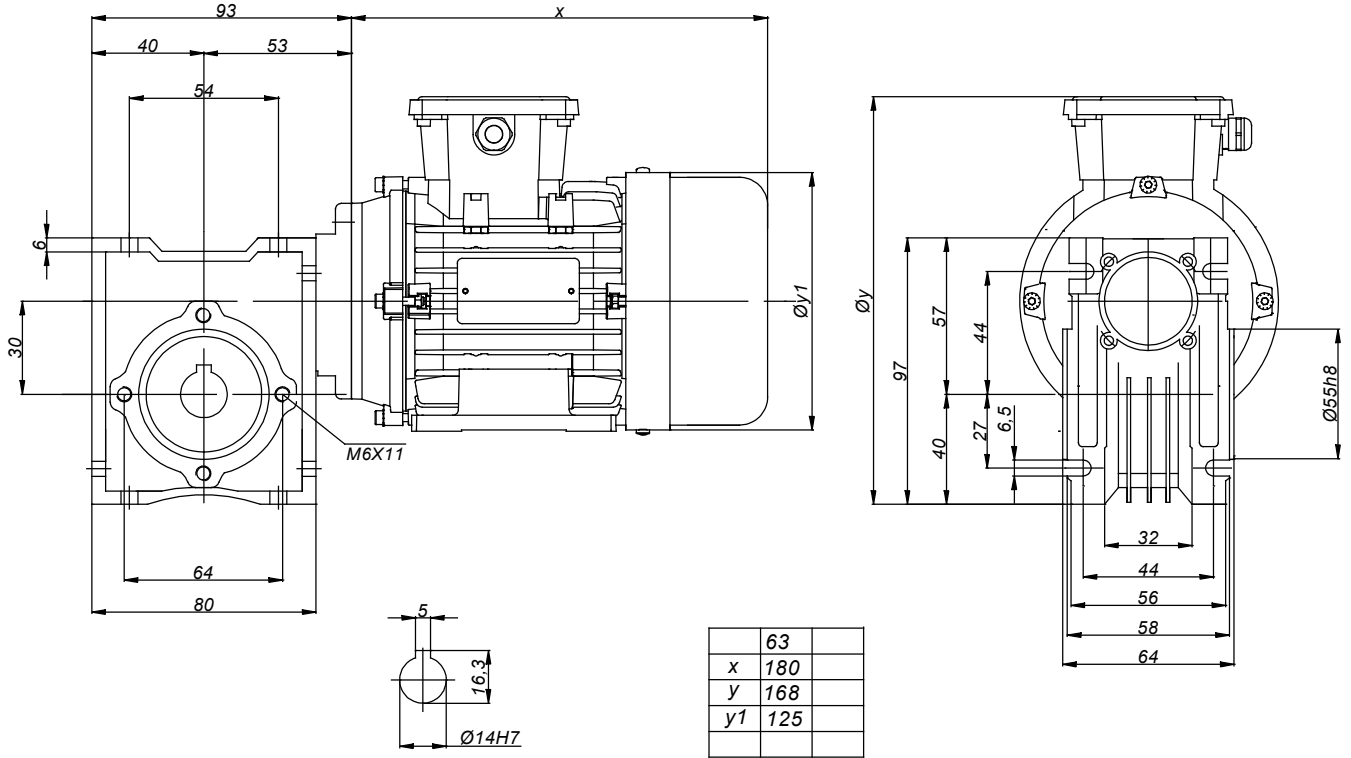


FT 030

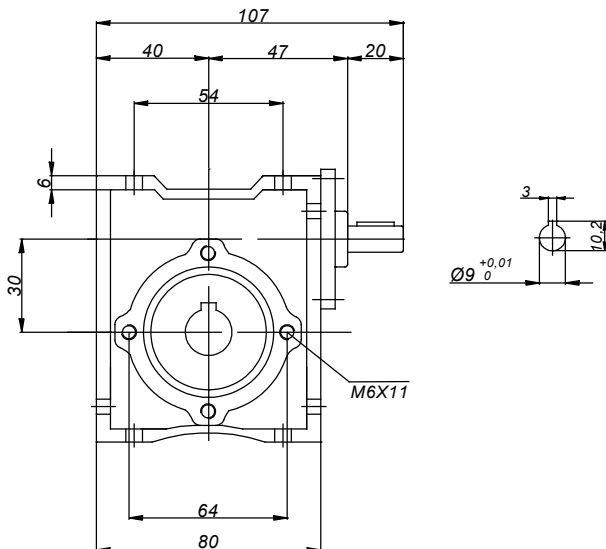


FN 030

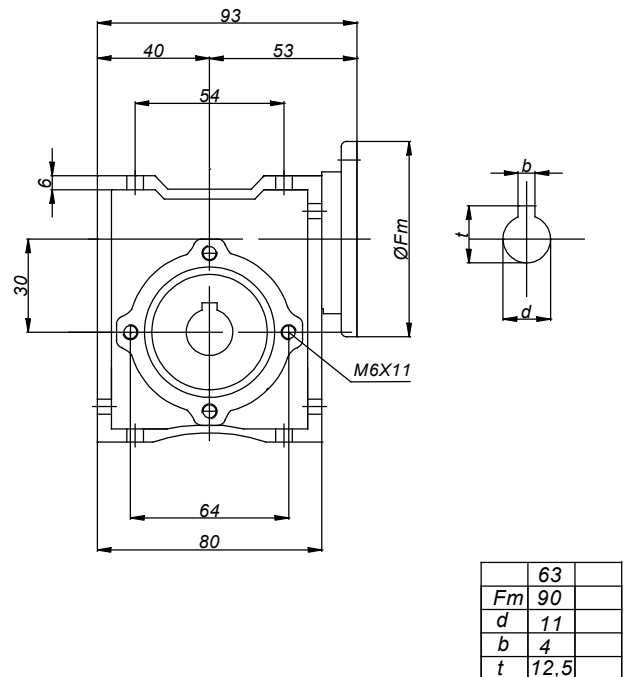


FV 040

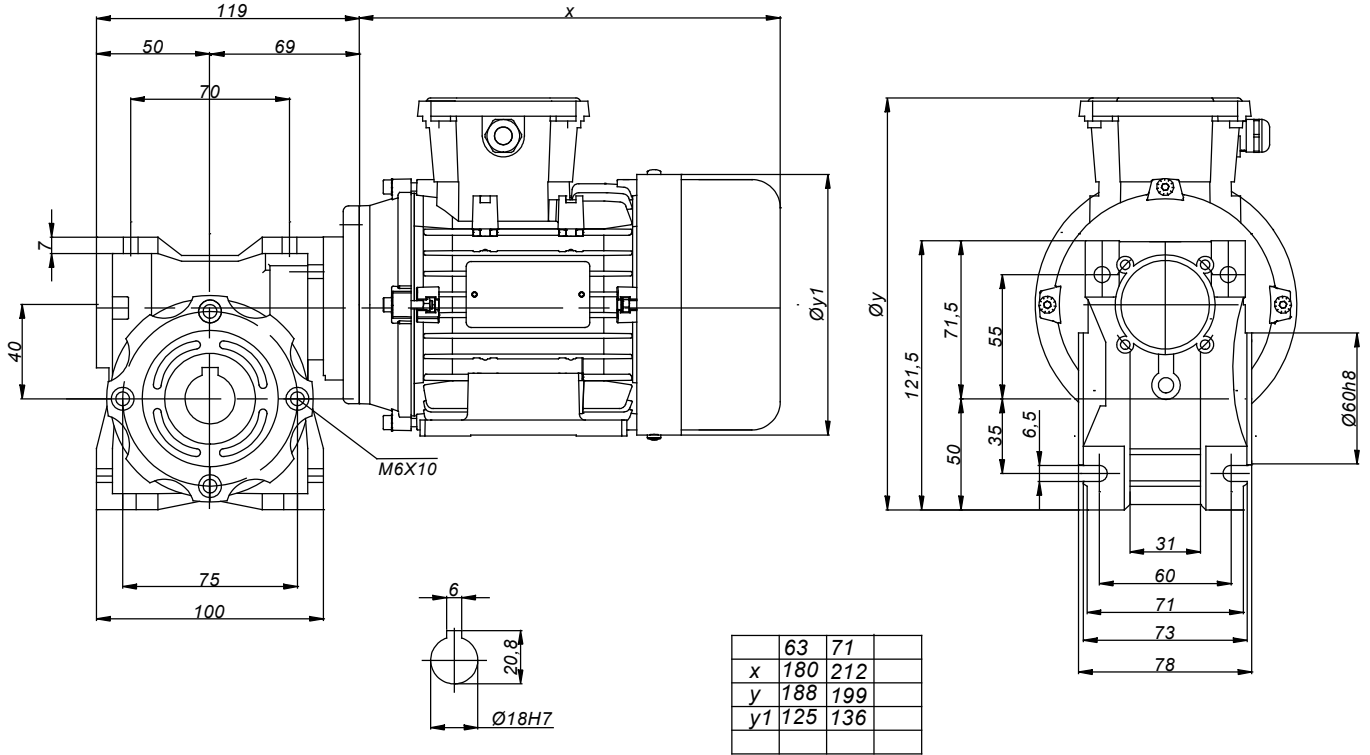


FT 040

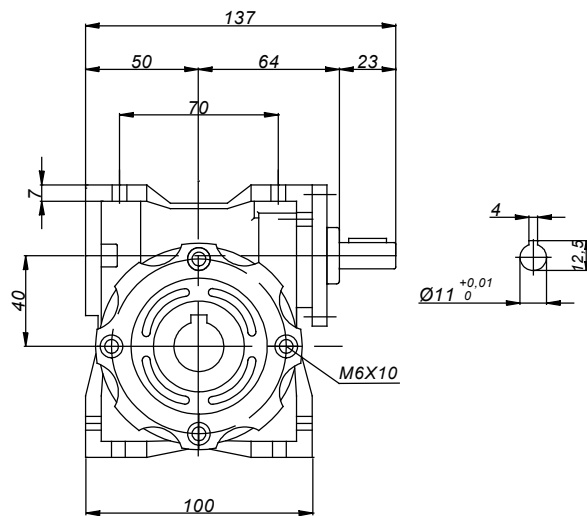


FN 040

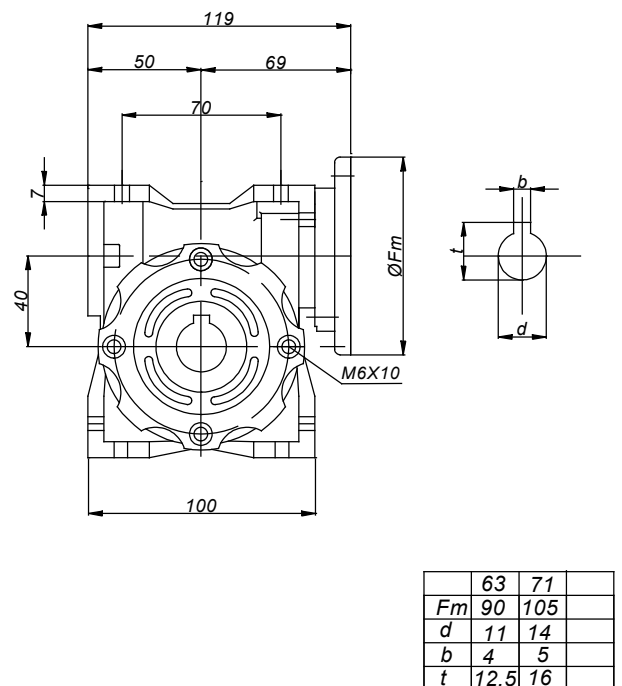


FV 050



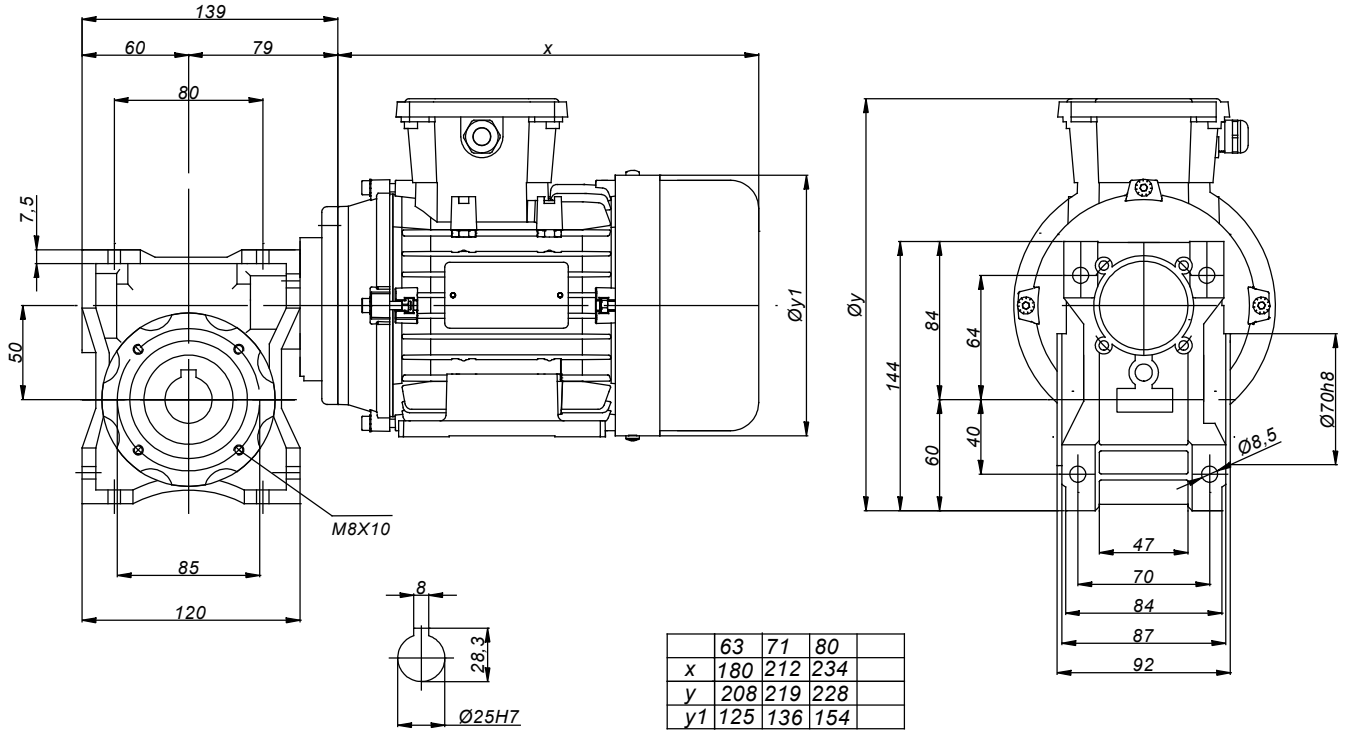


FT 050

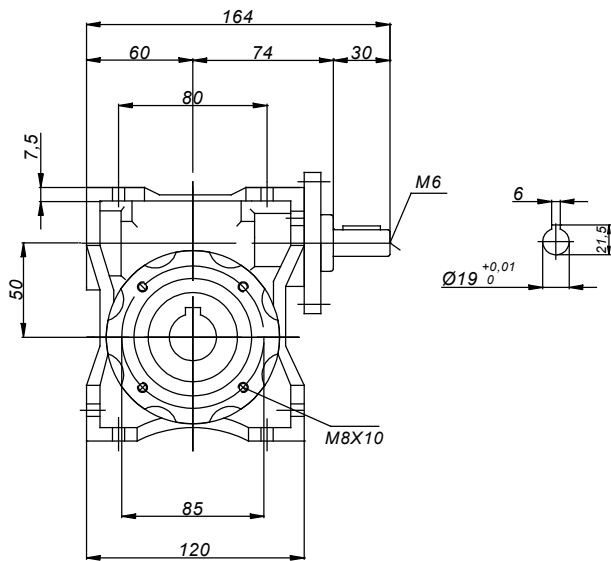


FN 050

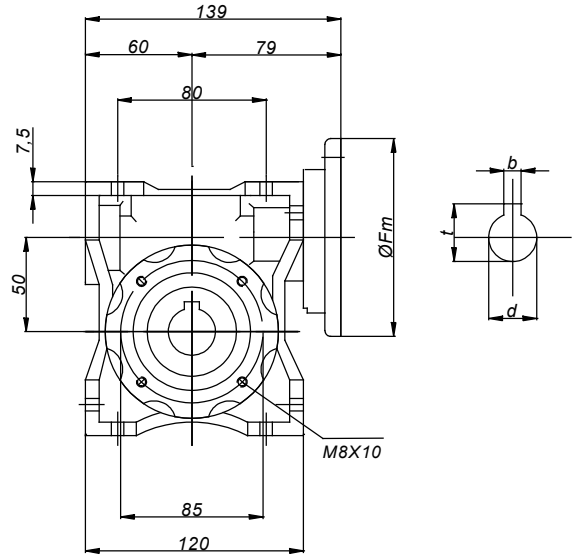

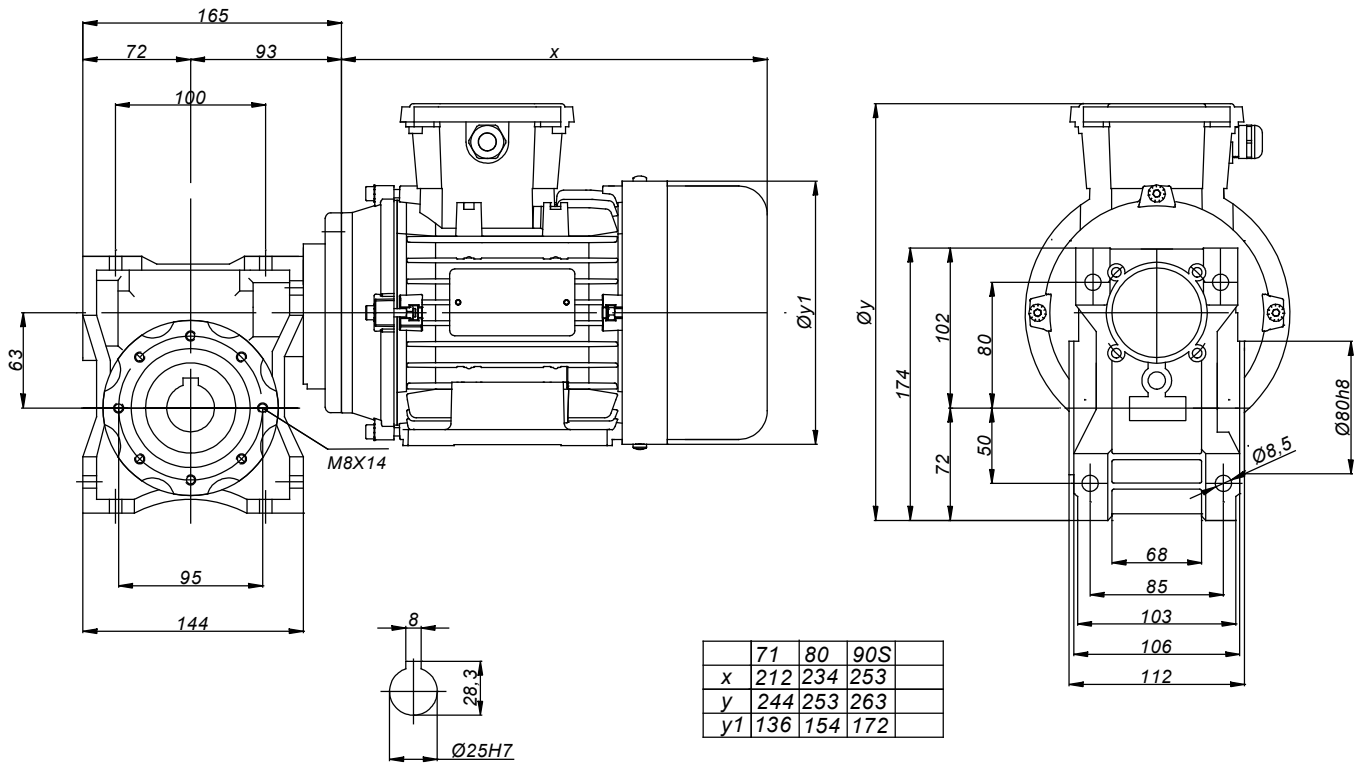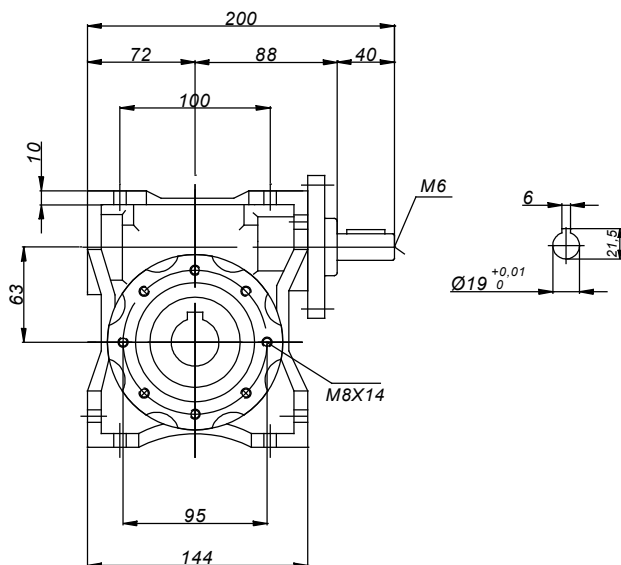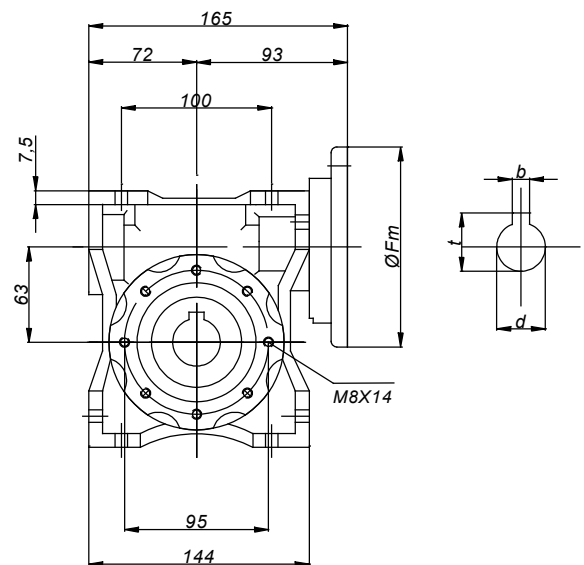
FV 063**FT 063*****FN 063***

	71	80	90
F_m	105	120	140
d	14	19	24
b	5	6	8
t	16	21.5	27


FV 075

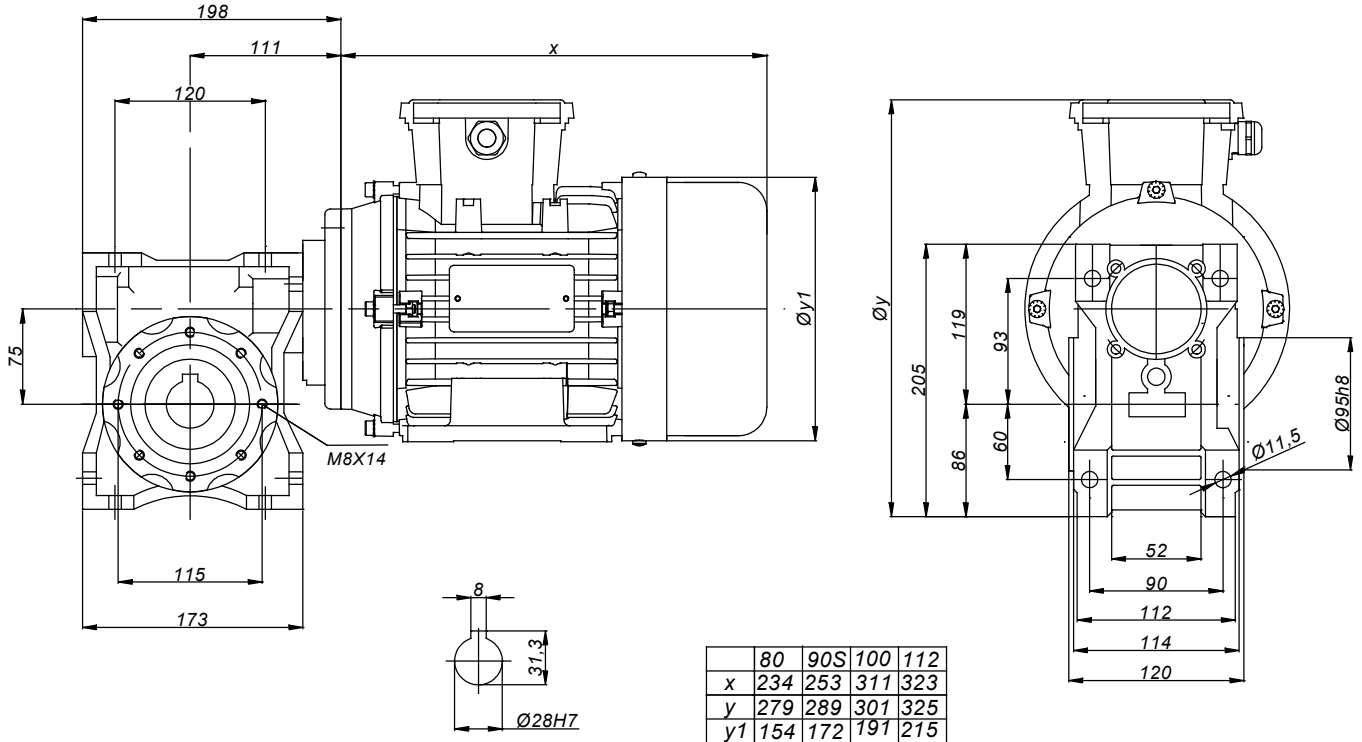


FT 075

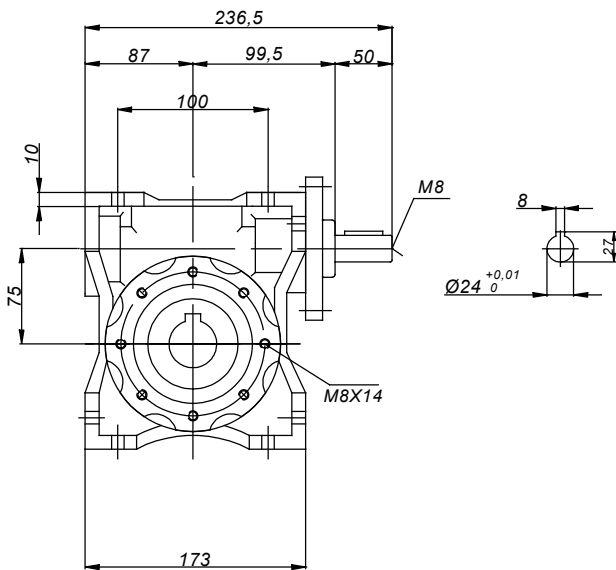


FN 075

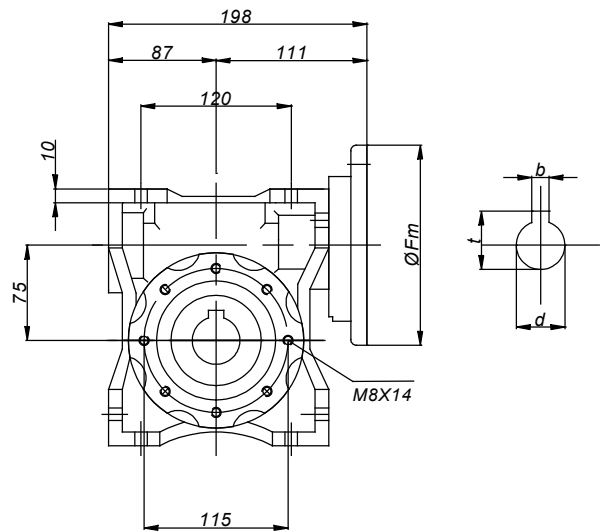


FV 090

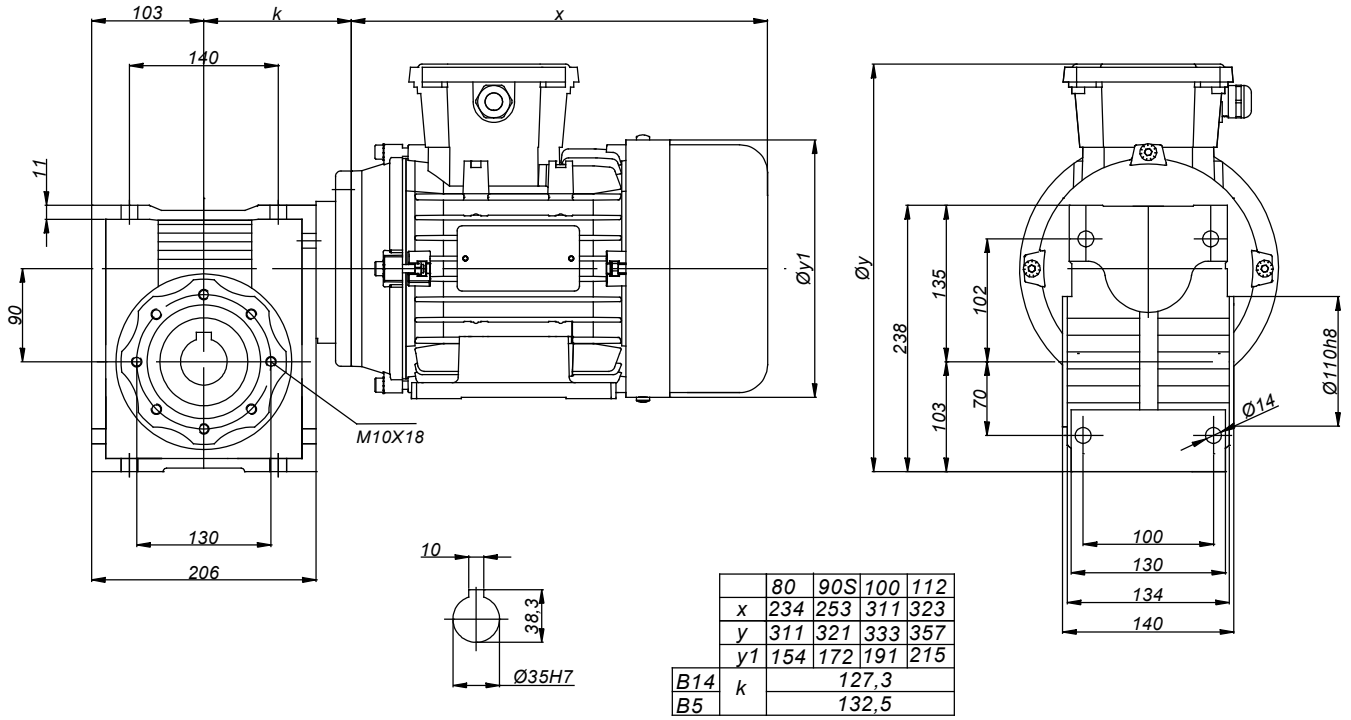


FT 090

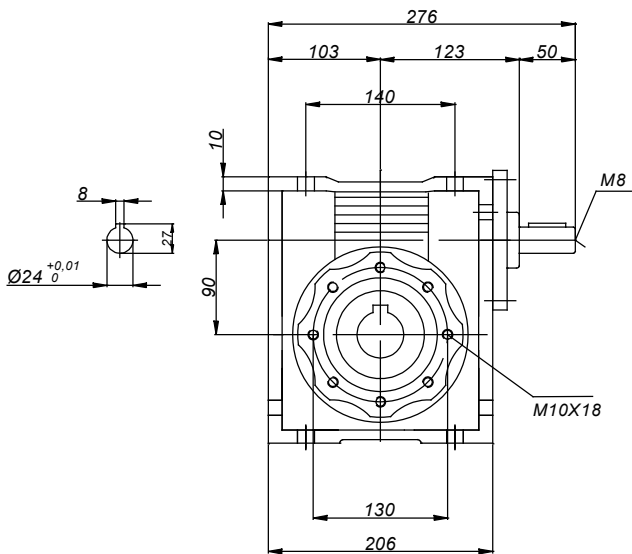


FN 090

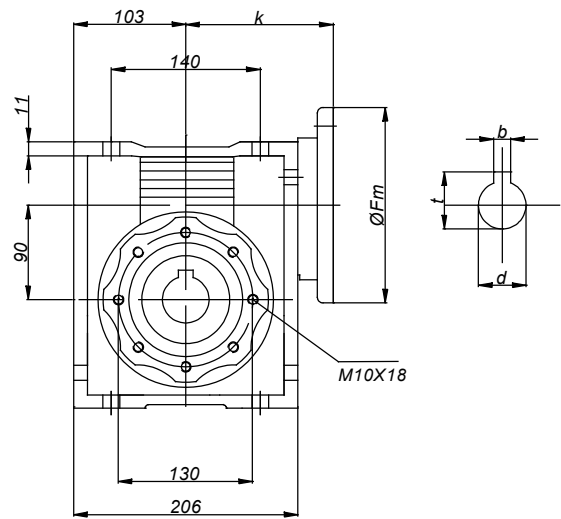


FV 110

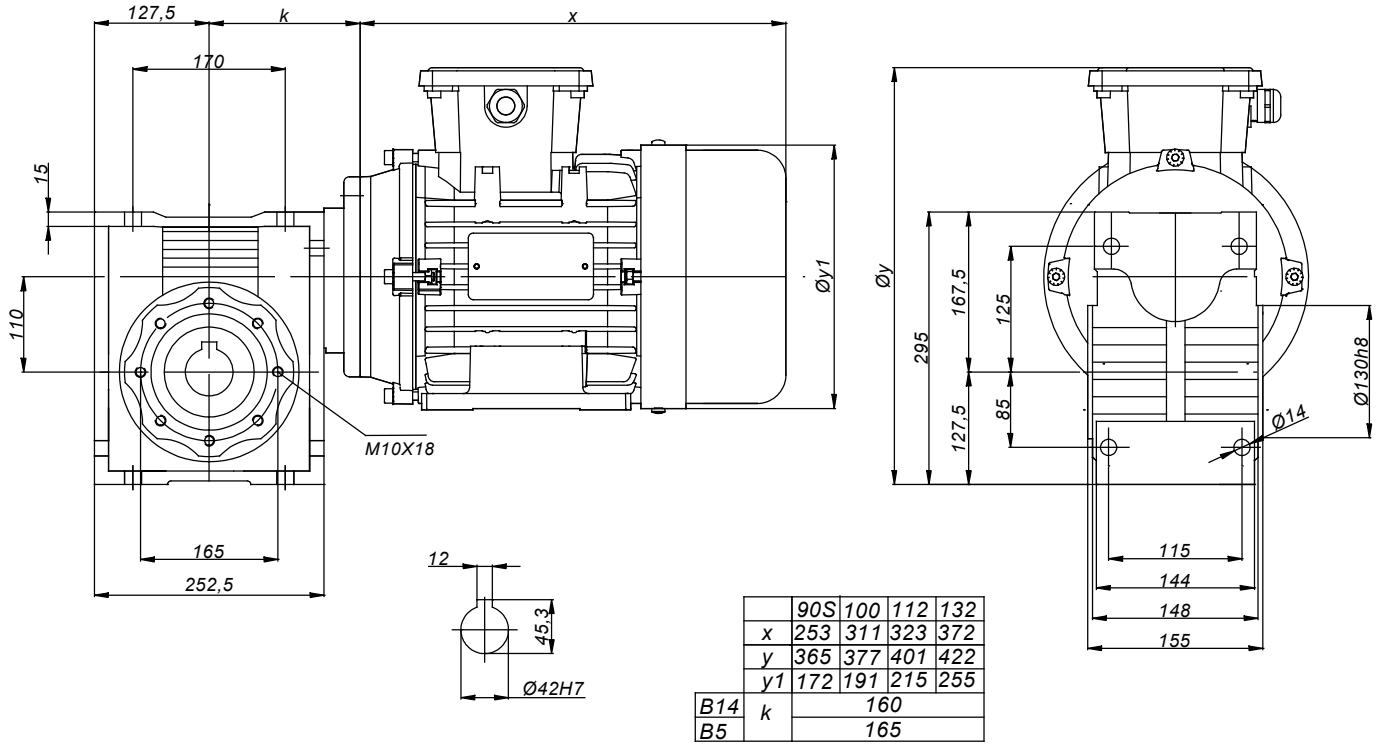


FT 110

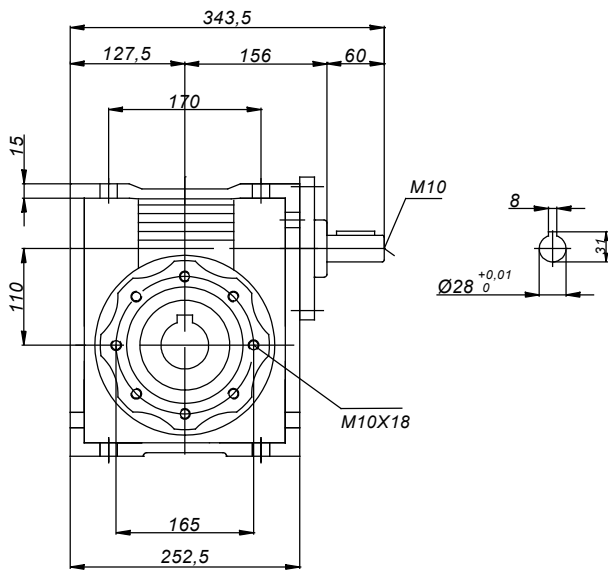


FN 110

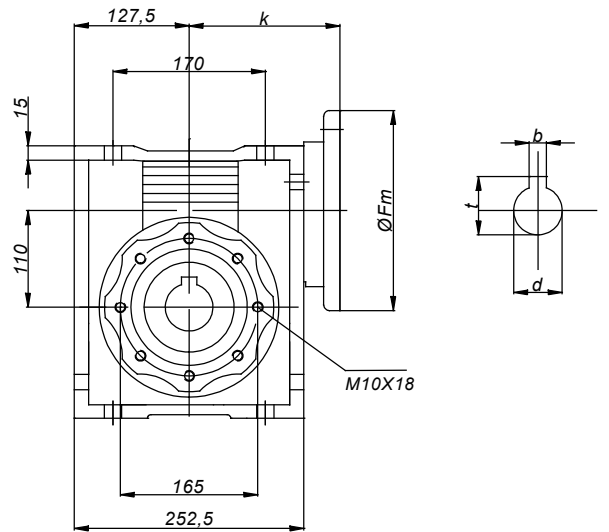


FV 130

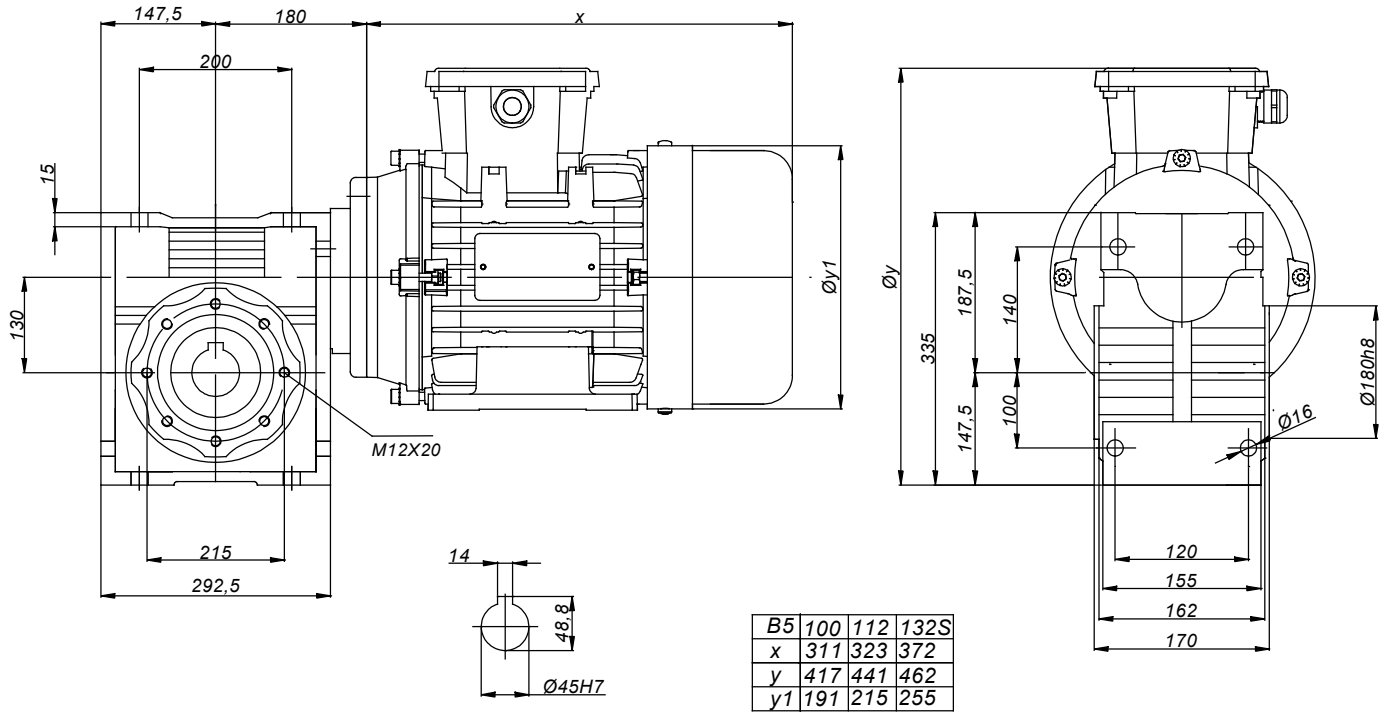

FT 130

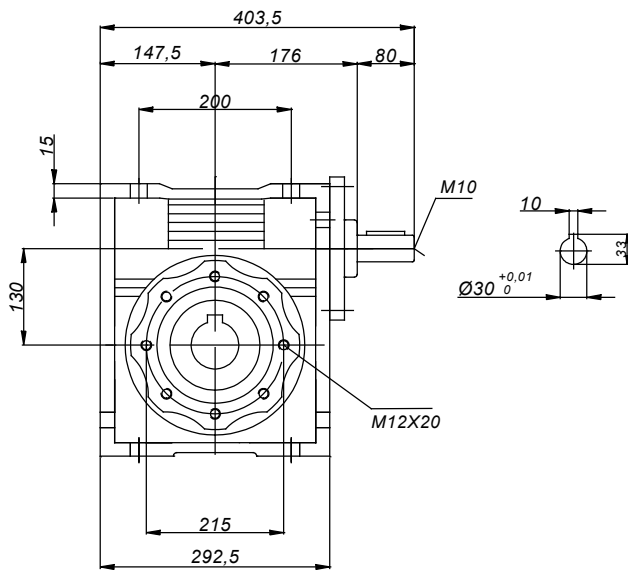

FN 130

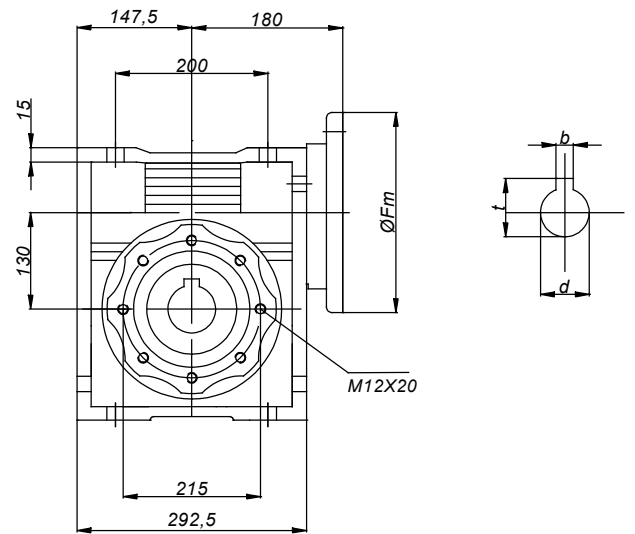

B5	100	112	132S
Fm	250	250	300
d	28	28	38
b	8	8	10
t	31	31	41